

Opti Rack SOP - Rack Spacers



Click for
video demonstration

Introduction

Opti rack spacers allow facilities to automate rack spacing, which provides the perfect between each rack and between each rack and walls.

The side spacer attaches to the rack in the same manner as the rear spacer.

Installation

1. Position the spacer in a tilted manner centered above the rack (Figure 1). Use a ladder if necessary.
2. Push the spacer toward the center of the rack until the spacer hooks move beyond the rack roof lip (Figure 2).
3. Pull the spacer forward until each hook is stopped by the rack roof (Figure 3)
4. Rotate the spacer down (Figure 4).



Figure 1



Figure 2



Figure 3



Figure 4



Position racks with rear spacers very slowly as they approach the wall.